

Wonderful Communication, Mobile Life.

HUAWEI U7519 User Guide

Contents

Introduction

About This Guide	P1
Frequency Band	P1
Packing List	P1
SIM Card and Memory Card ..	P2
Charging the Battery	P3
Appearance of Your Phone ..	P5
Home Screen	P6
Using the Touchscreen	P7
Calibrating the Touchscreen ..	P8
Dragging and Flicking	P8
Accessing the Widget Bar ...	P9
Security Settings	P9

Text Input

On-screen Keypad Mode ..	P11
T9® Input Method	P12
Traditional Input Method ...	P12

Customized Settings

Profiles	P13
Phone Settings	P13
Display Settings	P14
Network Settings	P14

Call Service

Contacts	P15
Making a Call	P16
Answering or Rejecting a Call	P17
Call Settings	P18

Messaging

Sending a Message	P19
Viewing a Message	P19
Broadcast Inbox	P20
Message Settings	P20

Entertainment

Playing Music or Video	P21
Using Camera or Video Camera	P21
Using FM Radio (Optional) ..	P22

Organizer

Viewing the Calendar	P23
Creating a Reminder	P23
Creating a Note	P23
Managing files	P24
Creating an Alarm	P24
Using Other Organizers ...	P25

Connectivity

Installing PC Options	P26
Using PC Options	P27
Connecting via Bluetooth ..	P29
Using Bluetooth Headset ..	P30
Accessing the Internet	P31

Warnings and Precautions

Electronic Device	P32
Medical Device	P32
Potentially Explosive Atmosphere	

.....	P32
Traffic Security	P33
Operating Environment	P34
Prevention of Hearing Damage	
.....	P34
Safety of Children	P35
Accessories	P35
Battery and Charger	P35
Cleaning and Maintenance .	P36
Emergency Call	P37
Certification Information (SAR)	
.....	P37
FCC Statement	P38
Industry Canada Compliance	P39

Notice

Copyright © Huawei Technologies Co., Ltd. 2010. All rights reserved.

No part of this document may be reproduced or transmitted in any form or by any means without prior written consent of Huawei Technologies Co., Ltd.

The product described in this manual may include copyrighted software of Huawei Technologies Co., Ltd. and possible licensors. Customers shall not in any manner reproduce, distribute, modify, decompile, disassemble, decrypt, extract, reverse engineer, lease, assign, or sublicense the said software, unless such restrictions are prohibited by applicable laws or such actions are approved by respective copyright holders under licenses.

Trademarks and Permissions



HUAWEI and  are trademarks or registered trademarks of Huawei Technologies Co., Ltd.

Other trademarks, products, services and company names mentioned are the property of their respective owners.

Notice

Some features of the product and its accessories described herein rely on the software installed, capacities and settings of local network, and may not be activated or may be limited by local network operators or network service providers. Thus the descriptions herein may not exactly match the product or its accessories you purchase.

Huawei Technologies Co., Ltd. reserves the right to change or modify any information or specifications contained in this manual without prior notice or obligation.

NO WARRANTY

THE CONTENTS OF THIS MANUAL ARE PROVIDED “AS IS”. EXCEPT AS REQUIRED BY APPLICABLE LAWS, NO WARRANTIES OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE MADE IN RELATION TO THE ACCURACY, RELIABILITY OR CONTENTS OF THIS MANUAL.

TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, IN NO CASE SHALL HUAWEI TECHNOLOGIES CO., LTD. BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES, OR LOST PROFITS, BUSINESS, REVENUE, DATA, GOODWILL OR ANTICIPATED SAVINGS.

Import and Export Regulations

Customers shall comply with all applicable export or import laws and regulations and will obtain all necessary governmental permits and licenses in order to export, re-export or import the product mentioned in this manual including the software and technical data therein.

Safety Precautions

Please read the safety precautions carefully to ensure the correct and safe use of your wireless device. For detailed information, refer to the section “Warnings and Precautions”.



Do not switch on your phone when it is prohibited to use mobile phones or when the phone may cause interference or danger.



Do not use your phone while driving.



Follow any rules or regulations in hospitals and health care facilities. Switch off your phone near medical apparatus.



Switch off your phone in aircraft. The phone may cause interference to control signals of the aircraft.



Switch off your phone near high-precision electronic devices. The phone may affect the performance of these devices.



Do not attempt to disassemble your phone or its accessories. Only qualified personnel are allowed to service or repair the phone.



Do not place your phone or its accessories in containers with strong electromagnetic field.



Do not place magnetic storage media near your phone. Radiation from the phone may erase the information stored on them.



Do not put your phone in a high-temperature place or use it in a place with flammable gas such as a gas station.



Keep your phone and its accessories away from children. Do not allow children to use your phone without guidance.



Use only approved batteries and chargers to avoid the risk of explosions.



Observe any laws or regulations on the use of wireless device. Respect others' privacy and legal rights when using your wireless device.



Strictly follow the relevant instructions in this manual while using the USB cable. Otherwise your phone or PC may be damaged.

1 Introduction

About This Guide

This guide describes how to use your phone.

All the pictures in this guide are for your reference only. The actual appearance and display depend on the mobile phone you purchase.

Frequency Band

Your phone can operate where cellular coverage exists, automatically switching between WCDMA/HSDPA 2100 MHz (Band I)/AWS (Band IV), and GSM/GPRS/EDGE 850/900/1800/1900 MHz networks.

Packing List

The product package includes the following items.

- One HUAWEI U7519 mobile phone
- One Lithium Ion(Li-Ion) battery
- One battery charger
- One USB cable
- One Quick Start Guide
- One headset (Optional)

SIM Card and Memory Card

Insert your SIM card before using your phone. Remove the SIM card and the battery only after turning off your phone. To use the SIM card properly, please read the following instructions carefully.

NOTE:


- *Keep the SIM card out of the reach of children.*
- *The SIM card and its metal contacts can be easily damaged by scratching or bending. Be careful when you carry, insert or remove the SIM card.*
- *Always disconnect the charger from the phone before inserting or removing the SIM card.*

Your phone supports a memory card (microSD) with a capacity of up to 8 GB.

To insert or remove the memory card, you must remove the battery cover.

»» Introduction

Follow these steps to install of the SIM card and memory card.

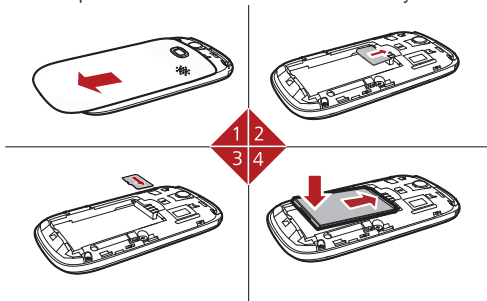

1 Remove the battery cover.

2 Insert the SIM card.

3 (Optional) Insert the memory card.

4 Insert the battery.

Charging the Battery


NOTE:

- The battery loses its charge even when it is not being used. If you have not used your phone for a long time, you should recharge it first.
- The battery can be recharged but eventually it will wear out again. If the battery lasts for a shorter time period than usual after being charged normally, replace it with a battery of the same type.


- *The time it takes to charge your phone depends on the environmental temperature and the age of the battery.*
- *When the battery charge is very low, the phone sounds a warning tone and a prompt will appear on the display screen. When the battery charge is too low, the phone will turn off automatically.*

Before charging the battery, ensure that the battery has been properly inserted into your phone. To charge the battery, first plug in the charger connector to a power socket, and then insert the plug of the cable into the connector of the phone as shown in the following figure. The figure is for reference only. The actual appearance is subject to your mobile phone and accessories delivered.

1. Plug in the phone charger into a power outlet.
2. Plug the charger into your phone's charger jack. When the battery is being charged, the battery icon blinks continuously.
3. When the battery icon stops blinking, it means that the battery is full. Disconnect the charger from the power outlet.
4. Unplug the charger from the phone.

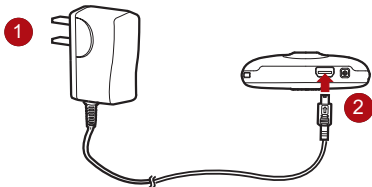


Appearance of Your Phone

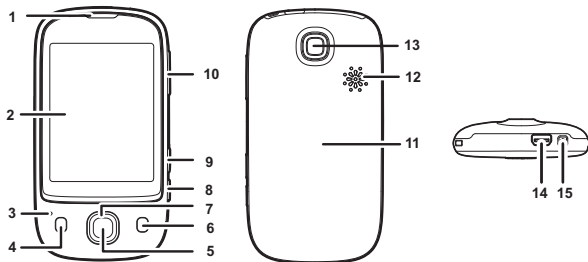

1	Earpiece	2	Touchscreen	3	Microphone
4	SEND Key	5	OK Key	6	END Key
7	Navigation Key	8	Camera Key	9	Lock Key
10	Volume Up/Down Key	11	Battery Cover	12	Speaker
13	Camera	14	Charger/USB/Headset Port	15	POWER Key

SEND Key	- Place or answer calls. - Access the Calls Screen in standby mode.
OK Key	Confirm a selection.
END Key	- End a call or reject an incoming call. - Return to the idle screen.
Camera Key	Activate the camera in standby mode when the screen is not locked.
Lock Key	Press to lock/unlock the phone.
POWER Key	Press and hold to turn phone on or off.

Home Screen

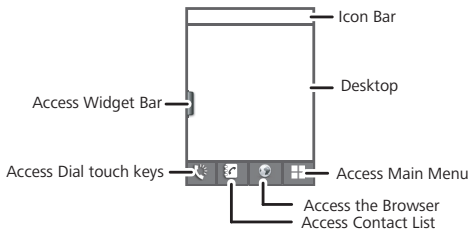

	The phone is currently in the 3G network.		The phone is currently in the GSM network.
	Handset is roaming.		An alarm is set.
	A call is in progress.		Bluetooth is connected.
	Bluetooth is enabled.		You have a new multimedia message waiting.
	You have a new text message waiting.		Memory card is inserted.
	The headset is connected.		You have a new voice message waiting.
	Displays current battery strength.		

Using the Touchscreen

You can select an item or enter text by tapping the touchscreen with your finger.

NOTE:

- *Tap properly on the icon to select it.*

- *To protect your touchscreen, tap gently.*
- *When the screen is locked, press the lock key to unlock the touchscreen.*
- *When the screen is locked, press the send key, the OK key or the end key to activate the screen. To unlock the screen, press and hold the icon according to the instructions on the screen.*

Calibrating the Touchscreen

If your phone does not respond to your touch requests correctly, calibrate the screen as follows.

1. Select **Settings> Touch settings> Calibrate** to access the screen for calibration.
2. To calibrate the screen, tap the centre of the calibration frame on the screen according to the instructions.

NOTE: *During the calibration, tap the center of the calibration frame properly to ensure that the phone responds correctly to your tapping and text entry after the calibration.*

Dragging and Flicking

You can perform the following operations by dragging your finger on the touchscreen.

- On the home screen, tap and drag the widgets to change their position on the screen.

»» Introduction

- In the menu list, drag up or down to scroll. To select a submenu, tap it.
- When viewing pictures, flick right or left to change the order of the pictures.

Accessing the Widget Bar

The widget bar provides quick access to the most frequently used items.

1. Tap the widget bar tab located on the left side of the home screen to open it.
2. To open an item on the widget bar, tap it.
3. Tap the widget bar tab to close it again.

NOTE: *You can drag a widget to the screen or drag it back to the widget bar.*

Security Settings

Select **Settings**> **Security**> **Phone and SIM card**> Desired item.

- Enter the password of your phone to restore factory defaults. The initial password is **0000**.
- If the phone lock or PIN lock is enabled, you need to enter the corresponding password when you switch on your phone.
- Change the password of your phone, PIN code, or PIN2 code.


- Set the fixed dialer number list to define the numbers that your phone can dial. This function needs to be supported by the SIM card.

NOTE:

- *For certain SIM cards, you need to enter the PIN2 code to use special functions.*
- *If you enter a wrong PIN code or wrong PIN2 code thrice consecutively, the SIM card will be locked. To unlock the SIM card, enter the PIN Unlocking Key (PUK) code or PUK2 code.*
- *If you enter a wrong PUK code or a wrong PUK2 code for ten consecutive attempts, the SIM card will get invalidated, and only emergency calls will be permitted. Consult your service provider to unlock the SIM card.*
- *The PIN code, PIN2 code, PUK code, or PUK2 code is provided with the SIM card. For details, consult your service provider.*
- *As implemented in some version of this product, when the phone is locked, user will not be able to dial any calls (including emergency calls) until a correct password has been entered and accepted by the phone.*

2 Text Input

On-screen Keypad Mode

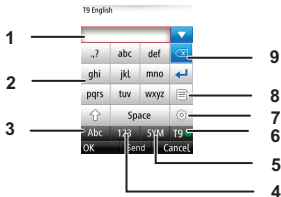

You can tap the keys on the on-screen keypad to enter alphabets, numbers, or symbols.

1	Candidate character area
2	On-screen keypad: Tap the keys on the keypad to enter alphabets, numbers, or symbols.
3	Display the current input language.
4	Tap here to switch to the numeric input mode.
5	Tap here to switch to the symbols input mode.
6	Tap here to enable or disable the T9 input method.

7	Tap here to set the input language.
8	Tap here to insert a common phrase, a contact, or an email address.
9	Tap here to delete the letter before the cursor.

T9[®] Input Method

With the T9 input method, you can easily and quickly enter words. T9 is a predictive text entry mode. Press the relevant key that corresponds to the required letter and T9 will offer you candidate words.

Press each key carrying the desired letter once, and then the predictive text scheme will present the candidate words composed by the letters you have entered.

Traditional Input Method

When T9 input method is switched off, you can use the traditional input method for entering alphabetic characters. Repeatedly tap the key that carries the alphabet to be entered until it appears on the screen.

3 Customized Settings

Profiles

You can set different profiles according to different scenarios.

- On the standby screen, tap the profile icon to edit it.
- Select **Settings** > **Profiles** > Desired item. Select a profile. Then, tap it or press the OK key to enable the profile or select **Edit** to modify the profile.

Phone Settings

Select **Settings** > **Phone settings** > Desired item. You can set the following:

- Time of your phone.
- Language of your phone.
- Sound options of your phone.
- Keypad tones.
- Enabling of automatic keypad lock.
- Enabling and time of automatic switching on or off.
- Set TTY mode.

Display Settings

Select **Settings** > **Display settings** > Desired item, you can set the following:

- Wallpaper in standby mode
- Brightness of the screen
- Enable keypad backlight
- Set backlight duration
- Greeting message

Network Settings

Select **Settings** > **Network** > Desired item. You can set the following:

- Network mode
- Manual or automatic network selection
- Preferred operators

4 Call Service

Contacts

You can save or manage the information about contacts in **Contacts**. You can also set a contact number as a speed dialing number.

Adding a Contact

1. Select **Contacts** > **New contact**.
2. Enter the information about the contact.
3. Select **Save** to save the contact.

Searching for a Contact

1. Select **Contacts**.
2. Tap the search bar to enter the contact name you are searching for.
3. The contacts corresponding to your input are listed.

You can also use quick search in the contacts list screen. You can find a contact by entering the initials of the first name or the last name of the contact. For example, to find a contact named "Alice Green", enter the initials "a" or "g". This contact is displayed in the contact list.

Making a Call

Making a Call Using the Keypad

1. On home screen, tap  to open the dial touch keys.
2. Enter the phone number using the dial touch keys. If you enter a wrong digit, you can tap  to erase it.
3. To make a call, perform one of the following operations:
 - By pressing the send key.
 - By Selecting **Options** > **Call**.
4. Press the end key to terminate a call.

NOTE: To perform other operations during a call, select them from the option list under **Options**.

Making a Call from Contacts

1. Access **Contacts**.
2. Select the desired contact.
3. To make a call, perform one of the following operations:
 - Tap  to make a call.

»» Call Service

- Press the send key to make a call.
- Select **Options** > **Call** to make a call.

Making a Call from Call History

You can view all the missed, received, or dialed numbers in call history.

1. Access **Calls**.
2. Select the desired call history.
3. To make a call, perform one of the following operations:
 - Tap  to make a call.
 - Press the send key to make a call.
 - Select **Options** > **Call** to make a call.

Answering or Rejecting a Call

When there is an incoming call, press the send key to answer the call, or press the end key to reject the call.

1. Select **Settings** > **Call settings** > **General** > **Answer mode** to set the answer mode.

2. You can answer a call according to your settings.

Call Settings

To enable call divert, call waiting and call barring functions, consult your service provider.

Select **Settings** > **Call settings**, you can enable or disable the preceding functions.

Select **Settings** > **Call settings** > **General** > Desired item, you can set the following:

- Prompt of saving unknown numbers.
- Automatic redialing after a call fails.
- Answering mode of incoming calls.
- Automatic answering mode.
- Set My number.

You can create, edit or delete your records.

5 Messaging

Sending a Message

1. To create a message, select **Messages > Create message** .
2. When editing a message, tap the icons at the bottom of the screen to insert pictures or other files.
3. After the message is completed, tap  or press the OK key. You can add a recipient by either selecting **Add from contacts**, **New number** or **Enter E-mail**.
4. Select **Send** to send the message.

Viewing a Message

Your phone provides four folders for messages. Received messages are stored in **Inbox**. Messages that are created but not yet sent saved in **Drafts**. Messages that are failed to be delivered are stored in **Outbox**. Messages that are successfully delivered are stored in **Sent**.

1. Select a folder from **Messages**. Then switch between the four folders through the navigation key.
2. Select a message, and then select **Options** to perform the operations provided in the option list.

Broadcast Inbox

The broadcast messages are saved in the broadcast inbox.

Select **Messages** > **Broadcast inbox** to view broadcast messages.

You can select **Messages** > **Settings** > **Broadcast** to set the broadcast message.

Message Settings

1. Select **Messages** > **Settings** > **SMS&MMS** or **Settings** > **Applications** > **Message settings** > **SMS&MMS**.
2. Set the parameters related to messages.

NOTE: Select **Messages** > **Settings**. You can also modify the settings of **Push message**, **Broadcast** or **Common phrases**.

6 Entertainment

Playing Music or Video

1. Select music files, video files, or playlists.
2. Press the OK key to play music or video.
3. During playback, you can perform the following operations:
 - Press the OK key to pause or resume the playing.
 - Tap the icons on the player screen to control the player.
 - Select **Options** to perform the operations of the option list.
 - Select **Exit** to exit from the player.

Using Camera or Video Camera

1. Press the camera key or select **Camera** to launch the camera.
2. In the viewfinder screen, you can tap the icons to perform the desired operations.
3. In the viewfinder screen, press the camera key or OK key to take a picture or record a video clip.

- When recording a video clip, you can pause or continue recording.
 - When recording a video clip, press the camera key or OK key to stop recording and save the video.
4. After taking a picture or recording a video clip, you can tap the icons on screen to perform the desired operations.

Using FM Radio (Optional)

1. Connect the headset to your phone.
2. Select **Entertainment > FM Radio** to launch the FM radio.
3. If the channel list is empty, select **Options > Automatic tuning / Manual tuning** to set channels.
4. Select **Exit** to exit from FM radio.

7 Organizer

Viewing the Calendar

1. Select **Organizer > Calendar**, and then select the desired date.
2. Press the OK key or tap the selected date to view the reminder.
3. Select **Options** to create a reminder, set the view mode, jump to a date, view incomplete reminders, and search the calendar.

Creating a Reminder

1. Select **Organizer > My Reminders**.
2. Click the tab on the top of the screen to change categories.
3. Select **Options > Desired item** to create reminders, view categories, or search reminders.

Creating a Note

Select **Organizer > Memo > New memo** to create a new note.

1. Select a note from **Memo**.
2. Select **Options > Desired item** to edit, send or delete the note.

Managing files

1. Select **My Files** > Desired item to manage pictures, music files, video clips, documents, ringtones, and other files.
2. Select a file folder, and then select **Options** > Desired item to perform operations in the option list.

When the phone detects and recognises the memory card, **Memory card** is displayed as a tab on the **My Files** screen. Select the required file in the memory card, and perform operations as required. In addition, you can also format the memory card.

Creating an Alarm

1. Select **Organizer** > **Alarms** > **New alarm** to set an alarm.
2. You can select an alarm from the alarm list, and then select the corresponding option to activate, deactivate, or delete the alarm.
3. When it is time for an alarm clock to ring, the selected alarm tone is played and a prompt is displayed. You can stop the ringing or snooze the alarm.

NOTE: *If your phone is powered off, the alarm clock will still ring. When the alarm rings, you can choose to power on the phone.*

Using Other Organizers

Your phone also provides **Calculator**, **Converter**, **World Time**, **Stop-watch**, and **Timer** functions in **Organizer**.

8 Connectivity

Installing PC Options

By using *PC Options* software, you can synchronise data between your phone and PC, surf the Internet using your phone as a modem and read the memory card by USB cable.

NOTE:

- *Your phone supports USB 2.0.*
- *Your phone supports plug and play function.*
- *The PC Options software and USB driver are preloaded in your mobile phone.*
- *The PC Options software supplied with your phone will run automatically after you connect your phone to the PC .*

To install a *PC Options* software, perform the following operations:

1. Connect your phone to the PC by using the USB cable.
2. The *PC Options* software supplied with your phone will run automatically. Wait for the dialog box to appear (this may take up to 30 seconds).
3. Select the desired button to install the software.

»» Connectivity

- Select *File Transfer* to perform the microSD Card Reader operation.
- Select *PC Assistant* button to install the *PC Suite* software. You can synchronise data between your phone and PC by using the *PC Suite* software.

4. For the first time, follow the wizard to complete the installation.

NOTE:

- *To connect your phone with a PC through a USB cable, first connect the USB connector to your phone, and then connect the other end of the cable to the PC. To disconnect your phone from the PC, first disable the PC Suite, then disconnect the USB connector from the PC, and finally disconnect the USB cable from your phone.*
- *If the PC cannot recognise your phone when connecting through the USB cable, power off and restart the PC and then retry.*
- *Do not frequently plug and unplug the USB cable out of the mobile phone. Doing so may cause adverse effects to your mobile phone.*

Using PC Options

USB-based Synchronization

You can synchronize data between your phone and PC. With a USB cable and the *PC Options* software, your phone can communicate with a PC.

1. Connect your phone to the PC by using the USB cable.
2. Run the *PC Suite* software on the PC.

3. Now you can perform the USB-based synchronization. For details, refer to the help section in the *PC Suit* software.

NOTE: Only Windows 2000, Windows XP and Windows Vista are supported.

microSD Card Reader

NOTE:

- The function of the microSD card reader and the other functions using the USB cable are incompatible. If you enable the microSD card reader, other functions using the USB cable are unavailable.
 - Your phone can switch to the microSD card reader mode only when you're on the home screen.
1. Insert the microSD card into your phone.
 2. Connect your phone to the PC by using the USB cable.
 3. *Found New Hardware* and a device icon are displayed at the notification area of your PC.
 4. The *PC Options* software supplied with your phone will run automatically. Select *File Transfer*.
 5. An icon for the mobile memory drive will appear on your PC. You can read the files saved in the microSD card directly by clicking on the appropriate folder.
 6. When finished reading files in microSD card reader mode, go to the notification area of your PC and safely remove your device from your PC.

»» Connectivity

7. Unplug your USB cable from the phone and PC.

Connecting via Bluetooth

Bluetooth-based Synchronization

Your phone can respond to data synchronization requests from a PC. To operate the Bluetooth synchronization with your phone, your PC must support Bluetooth function.

1. Install the *PC Suite*.
2. Select **Bluetooth > Bluetooth > On** to enable the Bluetooth function, and then select **Discoverable > Yes**.
3. Run the driver software for Bluetooth on the PC, and pair the phone. After the PC detects the phone serial port service, activate the Bluetooth serial port service on the phone.
4. Run the *PC Suite* on the PC.
5. You can now operate the synchronization. For details of the operation, refer to the help section in the *PC Suite* software.

NOTE: Only Windows 2000, Windows XP and Windows Vista are supported.

Bluetooth-based Data Transfer

You can exchange data between your Bluetooth phone and other Bluetooth devices. If you want to exchange data between your phone and

another device, that device must support Bluetooth and the Bluetooth function must be enabled.

1. Select **Bluetooth > Bluetooth > On** to enable the Bluetooth function.
2. Select **Search devices** to search for a Bluetooth device. When a Bluetooth device is found for the first time, authentication is required.
3. Now you can exchange data between your phone and the other Bluetooth device.

Using Bluetooth Headset

You can answer a call using a Bluetooth headset or Bluetooth loudspeaker. For details, refer to the corresponding user manual of a Bluetooth headset or loudspeaker.

1. Set the Bluetooth headset to the status for detecting.
2. Select **Bluetooth > Bluetooth > On** to enable the Bluetooth function.
3. Select **Search devices** to search a Bluetooth device. When a Bluetooth device is found for the first time, authentication is required.
4. If a Bluetooth headset is detected and recognized for the first time, it should be authenticated by a PIN code.

Use the Bluetooth headset with your phone once the connection has been established.

The Bluetooth headset should be set to the status for detecting only when authentication is needed. Once the headset has been authenticated, you

»» Connectivity

just need to turn on your Bluetooth headset. For more information, refer to the user manual of your Bluetooth headset.

NOTE: *The procedure for using a Bluetooth loudspeaker is similar to that for a Bluetooth headset. For details, refer to the user manual supplied with your Bluetooth loudspeaker.*

Accessing the Internet

1. Select **Browser** to access the internet.
2. You can perform the following when browsing:
 - Opening the homepage
 - Entering a website to access and connect to it
 - Saving or editing frequently visited websites
 - Browsing saved web pages offline
 - Browsing history web pages
 - Setting the Browser

9 Warnings and Precautions

This section contains important information pertaining to the operating instructions of your device. It also contains information about how to use your device safely. Read this information carefully before using your device.

Electronic Device

Turn off your device if using it is proscribed. Do not use the device if it will cause danger or interference with electronic devices.

Medical Device

- Follow rules and regulations set forth by hospitals and health care facilities. Do not use your device when using it is prohibited.
- Pacemaker manufacturers recommend that a minimum distance of 15 cm be maintained between a device and a pacemaker to prevent potential interference with the pacemaker. If you are using a pacemaker, you should use the ear opposite the pacemaker and you should not carry the device in your breast pocket.

Potentially Explosive Atmosphere

Turn off your device in any area with a potentially explosive atmosphere, and comply with all signs and instructions. Areas that may have potentially explosive atmospheres include the areas where you would normally be advised to turn off your vehicle's engine. Triggering sparks in such areas could cause an explosion or a fire, resulting in bodily injuries and even death. Do not turn on your device at refueling points such as service stations. Comply with restrictions on the use of radio equipment in fuel depots, storage and distribution areas and chemical plants. In addition, adhere to restrictions in areas where blasting operations are in progress.

»» Warnings and Precautions

Before using the device, watch out for areas that have potentially explosive atmospheres that are often, but not always, clearly marked. Such locations may include: below deck on boats, chemical transfer or storage facilities, and areas where the air contains chemicals or particles such as grain, dust or metal powders. Ask the manufacturers of vehicles using liquefied petroleum gas (such as propane or butane) whether this device can be safely used in their vicinity.

Traffic Security

Observe local laws and regulations regarding the use of the device. In addition, if using the device while driving a vehicle, comply with the following guidelines:

- Concentrate on driving. Your first responsibility is to drive safely.
- Do not talk on your device while driving. Use hands-free accessories.
- When you have to place or answer a call, park the vehicle on the side of the road before using your device.
- RF signals may affect electronic systems of motor vehicles. For more information, consult the vehicle manufacturer.
- In a motor vehicle, do not place the device over the air bag or in its deployment area. Otherwise, the device may hurt you when the airbag inflates with a strong force.
- Do not use your device while flying. Turn off your device before boarding an aircraft. Using a wireless device in an aircraft may cause danger to the operation of the aircraft and disrupt the wireless telephone network. It may also be considered illegal.

Operating Environment

- Do not use or charge the device in dusty, damp, and dirty places or places with magnetic fields. Otherwise, it may result in a malfunction of the circuit.
- The device complies with the RF specifications when the device is used near your ear or at a distance of 1.5 cm from your body. Ensure that the device accessories such as a device case and a device holster are not made with metal components. As mentioned above, keep your device 1.5 cm away from your body.
- On a stormy day with thunder, do not use your device when it is being charged, to prevent any danger caused by lightning.
- When you are on a call, do not touch the antenna. Touching the antenna affects the call quality and increases your power consumption. As a result, the talk time and the standby time are reduced.
- While using the device, observe the local laws and regulations, and respect others' privacy and legal rights.
- Keep the ambient temperature between -10°C and 45°C when the device is being charged. Keep the ambient temperature between -10°C to 55°C when the device is powered by a battery.

Prevention of Hearing Damage

Using a headset at a high volume can damage your hearing. To reduce the risk of damage to hearing, lower the headset volume to a safe and comfortable level.

»» Warnings and Precautions

Safety of Children

Comply with all precautions with regard to the safety of children. Letting the child play with your device or its accessories, which can include detachable parts, can be dangerous, as a small child could choke on them. Ensure that small children are kept away from the device and accessories.

Accessories

Use only manufacturer-approved accessories. Using accessories made by other manufacturers or vendors with this device model may invalidate any approval or warranty applicable to the device, result in the non-operation of the device, and cause danger.

Battery and Charger

- Unplug the charger from the power outlet and the device when you are not using it.
- The battery can be charged and lose its charge hundreds of times before it eventually wears out. When the standby time and the talk time are shorter than normal, replace the battery.
- Use the AC power supply defined in the specifications of the charger. An improper power voltage may cause a fire or your charger to malfunction.
- Do not connect two poles of the battery with conductors, such as metal materials, keys, or jewelries. Otherwise, the battery could be short-circuited and cause injuries and burns on your body.
- Do not disassemble the battery or solder the battery poles. Otherwise, it may lead to electrolyte leakage, overheating, fire, or explosion.
- If battery electrolyte leaks out, ensure that the electrolyte does not touch your skin and eyes. When the electrolyte touches your skin or

splashes into your eyes, wash your eyes with clean water immediately and consult a doctor.

- If there is a case of battery deformation, color change, or abnormal heating while you charge or store the battery, remove the battery immediately and stop using it. Otherwise, it may lead to battery leakage, overheating, explosion, or fire.
- If the power cable is damaged (for example, the cord is exposed or broken), or the plug loosens, stop using the cable at once. Otherwise, it may lead to an electric shock, a short circuit of the charger, or a fire.
- Do not dispose of batteries in fire as they may explode. Batteries may also explode if damaged.

Cleaning and Maintenance

- The device, battery, and charger are not water-resistant. Keep them dry. Protect the device, battery, and charger from water or vapor. Do not touch the device or the charger with wet hands. Otherwise, it may lead to a short circuit, a device malfunction, and an electric shock to the user.
- Do not place your device, battery, and charger in places where they can get damaged because of collision. Otherwise, it may lead to battery leakage, device malfunction, overheating, fire, or explosion.
- Do not place magnetic storage media such as magnetic cards and floppy disks near the device. The magnetism of the device may erase the data stored in them.
- Do not leave your device, battery and charger in a place with an extremely high or low temperature. Otherwise, they may not function properly and it could lead to a fire or an explosion. When the temperature is lower than 0°C, the battery's performance is affected.

»» Warnings and Precautions

- Do not place sharp metal objects such as pins near the earpiece. The earpiece may attract these objects and hurt you when you are using the device.
- Before you clean or maintain the device, turn off the device and disconnect it from the charger.
- Do not use any chemical detergent, powder, or other chemical agents (such as alcohol and benzene) to clean the device and the charger. Otherwise, parts of the device may be damaged or a fire can be caused. You can clean the device and the charger with a piece of damp and soft antistatic cloth.
- Do not dismantle the device or accessories. Otherwise, the warranty on the device and accessories will become invalid and the manufacturer will not be liable to pay for the damage.

Emergency Call

You can use your device for emergency calls in the service area. The connection, however, cannot be guaranteed in all conditions. You should not rely solely on the device for essential communications.

Certification Information (SAR)

This device meets guidelines for exposure to radio waves.

Your device is a low-power radio transmitter and receiver. As recommended by international guidelines, the device is designed not to exceed the limits for exposure to radio waves. These guidelines were developed by the independent scientific organization International Commission on Non-Ionizing Radiation Protection (ICNIRP) and include safety measures designed to ensure safety for all users, regardless of age and health.

The Specific Absorption Rate (SAR) is the unit of measurement for the amount of radio frequency energy absorbed by the body when using a device. The SAR value is determined at the highest certified power level in laboratory conditions, but the actual SAR level of the device when being operated can be well below the value. This is because the device is designed to use the minimum power required to reach the network.

The SAR limit adopted by the USA and Canada is 1.6 watts/kilogram (W/kg) averaged over one gram of tissue. The highest SAR value reported to the FCC and IC for this device type when tested for use at the ear is 1.09 W/kg, and when properly worn on the body is 0.687W/kg.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

»» Warnings and Precautions

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications made to this device not expressly approved by Huawei Technologies Co., Ltd. may void the FCC authorization to operate this device.

Industry Canada Compliance

This phone complies with Industry Canada RSS 133/RSS 132/RSS 102. This phone complies with the Class B limits for radio noise emissions as set out in the interference-causing standard entitled "Digital Apparatus" (ICES-003) of Industry Canada.

V100R001_01